

# swissvoice

## ePure

TAM 2nd generation

Cordless digital telephone (DECT)  
WITH DIGITAL ANSWERING MACHINE



**User manual**

## **Welcome to Swissvoice**

The ePure TAM 2nd generation is a cordless telephone with answering machine designed for connection to an analog telephone network. International DECT (GAP)-standard digital technology offers excellent voice quality.


You can register up to 4 handsets to your base and make internal calls free of charge.

Please read these operating instructions carefully to familiarise yourself with and take full advantage of an benefits of your new ePure.

# Contents


|  |    |
|--|----|
| Keys .....                             | 4  |
| Display symbols .....                  | 5  |
| Range/Location .....                   | 5  |
| Battery advice .....                   | 6  |
| Inserting the battery .....            | 7  |
| Connecting the phone .....             | 7  |
| Set date and time .....                | 8  |
| Set language .....                     | 8  |
| Making a call .....                    | 8  |
| Keypad lock .....                      | 10 |
| Redial .....                           | 10 |
| PBX operation .....                    | 11 |
| Paging – Locate mislaid handsets ..... | 11 |
| Phonebook .....                        | 11 |
| Direct memory .....                    | 12 |
| Calls list .....                       | 12 |
| Troubleshooting .....                  | 12 |
| Extending number of handsets .....     | 14 |
| Conference Call creation .....         | 15 |
| Personal settings .....                | 16 |
| Advanced settings .....                | 16 |
| Answer machine .....                   | 18 |
| Help .....                             | 22 |
| Appendix .....                         | 24 |

## Keys

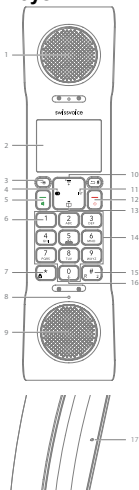

## Handset

1. Earpiece
2. Display
3. Menu key (OK key)
4. Redial key
5. Talk key
6. Key 1
7. Star key
- In standby: Long press to activate / deactivate the keypad lock.
8. Microphone
9. Loudspeaker
10. Call Log / Playback answering machine message / Volume up / Scroll up
11. Intercom (INT key)
12. End call key / back to idle mode
13. Phonebook / Volume down / Scroll down
14. Digit keys
15. Ringer on/off (#Key)
16. Key 0 (insert a space /insert a pause)
17. Control LED on the left side of the handset (flashes when you have one or more missed calls, flashes quickly with an incoming call)

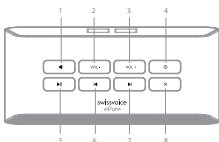

## TAM base

- 1 Page key (on the bottom)
- 2/3 Adjust volume
- 4 Switch answer machine on/off
- 5 Start/stop playback
- 6 Repeat message/return to previous message
- 7 Skip to next message
- 8 Delete message during playback

## Display symbols



Steady on: battery's charge level.  
Flashing: battery needs to be charged.

12:03

Time.



Call in progress.



Steady on: when you are consulting the call log.

Flashing: when there is missed call.



The phonebook is open.



Scroll up/down in a list or a menu.

OK

Confirmation On.



Loud incoming call ringer has been turned off.



Handsfree active On.



Alarm is set.



ECO range set to HOUSE (in standby mode)



ECO range set to APARTMENT (in standby mode)



ECO range set to ROOM (in standby mode)



ECO range set to OFF (in standby mode)



In talk mode, shows the RF strength



"Leaf icon" Display when the Zero Emissions is on.



Voice Mail Waiting



Steady on: the answer machine is activated.  
Flashing: you have new answer machine messages.

## Range/Location

To obtain the best possible range, we recommend positioning the telephone in a location central to your sphere of activity. Avoid positioning the telephone in niches, recesses and behind steel doors.

The maximum range between base station and handset is approximately 300 meters outdoors. Depending on the surrounding conditions as well as spatial and structural factors, the range may be less. Silent zones can occur due to the digital transmission in the frequency range used – even within the range, depending on the structural environment. In this case the

transmission quality may be reduced through the increased incidence of short breaks in transmission. Normal call quality can be restored if you move slightly out of the silent zone. If the range is exceeded, the call will be disconnected unless you move back into range within ten seconds.

## Battery advice

Use only the original battery (Li-Ion 3.7 V/550 mAh) as well as the original power supply (7.5 VDC /300mA).

The handset operating times (standby 220 hours/active 12 hours) and charging times apply only if the battery is charged to the defined minimum capacity.

Charging is electronically controlled to ensure optimal charging and care of battery in different charge states. Full capacity is achieved only after several charging cycles.

**Note:**


**Using other rechargeable battery or non-rechargeable battery/primary cells can be dangerous and cause malfunctions or damage to the telephone. Do not short-circuit the battery (danger). In particular, avoid inadvertent shortcircuits during storage and transport e.g. bunch of keys, metal panels or similar objects, and make sure the battery do not come into contact with greasy materials. When not in the handset, therefore, battery should be stored only in insulating packaging. Ensure also that the contacts do not touch greasy parts. Rechargeable battery can become warm while recharging. This is a normal occurrence and is not dangerous.**

## Inserting the battery

Step 1: To open the battery door, use a small tool like a door key, plug the tip into the recess at the end of handset. Then, the door can be opened freely (in the direction of the arrow).

Step 2: The battery compartment is situated in the handset. Insert the battery in the battery compartment.


Step 3: Replace the handset cover.

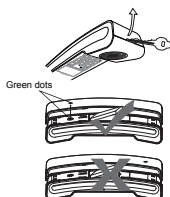

**Make sure you install the battery pack and fit the cover the right way round:**

- position the 3 metal contacts of the battery pack against the 3 blade contacts;
- align the green dot on the handset with the one on the cover.
- align the cover top against the handset top, then clicks it until middle and bottom sides click into place.


## Connecting the phone

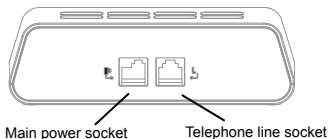


- Before you can start using your telephone you must plug in the telephone connector cable and the power adapter.
- When the phone is delivered, the battery is not yet charged.
- To charge the battery, insert the handset on the base station. The battery will take around 6 hours to fully charge (initial charge).

## Set date and time

When setting up the telephone the first time, the date and time have not been set.

- Press , select **Clock/Alarm** with the **navigation key +/-** and press **OK**.
- Select **Date&Time** and press **OK**.
- Enter date and press **OK** using the keypad.
- Enter the time and press **OK** using the keypad.


## Set language

- The language of the display texts can be changed in the menu:
  - Press , select **Personal Set** with the **navigation key +/-** and press **OK**.
  - Select **Language** and press **OK**.
  - Select language with the **navigation key +/-** and press **OK**.


## Making a call

- Dial the desired number using the keypad.
- Press the **Talk key** .

## Accepting a call

- Incoming calls are signalled by a ring tone and a quick flashing of the control LED on the handset.
- Press the **Talk key**  and conduct your conversation.

## Ending the call

- Press the **End call key** .





**Calls cannot be made if the battery is almost discharged or the handset is out of range of the base station.**





## Handsfree operation

You can use the handsfree function to conduct calls without holding the handset in your hand and allow others present in the room to take part in the call.



Activating handsfree before a call:

1. Press . The display shows . Press again . You can hear the ringing signal through the handset loudspeaker.
2. Press  to deactivate handsfree speaking.

Activating handsfree during a call:

Press . To deactivate handsfree speaking, again press .

## Switch ringer off



When a call is coming in, press and hold the  key for approx. 3 seconds. The ringer is switched off for this call .

## Set speaker/loudspeaker volume


You can adjust the speaker/loudspeaker volume during a conversation.

Set the desired volume using the **navigation key +/-**.


## Switch handset off

- Press and hold the **End call key**  (approx. 5 sec).
- Press and hold again the **End call key**  to reactivate the handset.

## Set alarm

- Press , select **Clock/Alarm** using the **navigation key +/-** and press **OK**.
- Select **Set Alarm** using the **navigation key +/-** and press **OK**.
- Select the desired alarm function (e.g. On once), enter the alarm time and press **OK**.

## Set alarm tone

- Press , select **Clock/Alarm** using the **navigation key +/-** and press **OK**.
- Select **Alarm Tone** using the navigation key +/- and press **OK**.
- Select the desired alarm melody and press **OK**.

The activated alarm is displayed in standby mode by .


The alarm sounds for 30 seconds or can be deactivated immediately by pressing any key. (If press navigator key, the alarm will on again in 10 minutes)

## Set auto clock

The alarm sound changed to 30 seconds from 60s. If set to ON, the date/time can be updated by CID; if set to OFF, it cannot be updated by CID.

## Keypad lock

### Activate keypad lock


- Press  approx. 3 sec. Keys Locked. All keys are locked.

### Deactivate keypad lock

- Press  approx. 3 sec.

## Redial


The Redial list contains up to 10 entries.

- Press  and select the desired entry using the **navigation key +/-**.
- Press the **Talk key**.

### Edit redial list

- Open the Redial list, press **OK**.  
You have the following options:
  - **Save Number** – Add number to the phonebook.
  - **Delete** – Delete the entry.
  - **Delete All** – Delete the entire redial list.

## PBX operation

Your telephone is designed for use in the analogue telephone network and can be operated on a PBX that supports DTMF dialling and flash signalling. To enter the R (e.g. needed to establish a connection) press and hold **# key** .

You can adjust the flash/recall time for R (see chapter "Advanced settings").

## Paging – Locate mislaid handsets



All registered handsets ring for one minute, when the **Paging key** on the TAM base is pressed. To stop the ring press the **End call key** on the handset or the **Paging key** on the base.

## Phonebook


You can store up to 100 names and numbers in the phonebook.

### Digits/Characters



Different characters are printed on each key. The entries in the phonebook are sorted alphabetically.

-  Press long hold **# key**, change from upper case to lower case letters (ABC/abc/Abc).
-  Press long hold **key 0** to insert a pause inside a phone number ("P" appears).  
Short press to insert a space.

### Adding new entries in the phonebook

- Press , select Phonebook and press **OK**.
- Select New Entry and press **OK**.
- Enter the desired name and number.
- Press **OK** to save the entry.

### Dial from phonebook

- Press , select Phonebook and press **OK**.
- Select List Entry and press **OK**.
- Select the desired entry using the **navigation key +/-** or enter the first letter of the name.
- Press the **Talk key**  to call the number using the keypad.


**In the phonebook menu you have the following options:**

- List Entry
- New Entry
- Delete All
- Direct Mem – Call a programmed direct memory number.

## **Direct memory**

Phone numbers from the phone book can be assigned to numerical keys 1 to 9.

### **Programming direct memory keys**

- Press , select Phonebook and press **OK**.
- Select Direct Mem and press **OK**.
- Select the desired memory key and press **OK** twice.
- Select Add and press **OK**.
- Select the desired entry from the phonebook using the **navigation key +/-** and press **OK**.

### **Calling a direct memory number**

To call a direct memory number, press the corresponding key for approx. 3 seconds. The programmed number is called.

## **Calls list**

The control LED on the side of the handset flashes when you have one or more missed calls. The calls list can contain up to 50 entries.

The Control LED will turn OFF once the user checks the call list.

**To use this function, the caller's number must be transmitted (CLIP). Contact your network operator for further information.**

## **Troubleshooting**

### **How to turn off this function?**

The Control LED will turn OFF once the user checks the call list.

### **Review the missed call log**

1. Press **navigation key** when the handset is not in use.
2. Press **navigation key** to browse through the missed call log.

**New voicemail light delete “and” and appears on the handset and the VOICEMAIL light on the telephone handset flashes and I don’t know why.**

Your telephone has voicemail indication. If **NEW VOICEMAIL** and the **VOICEMAIL** light on the telephone handset flashes, your telephone has received a signal from your telephone service provider that you have a voicemail message waiting for you to retrieve from them. Contact your telephone service provider for more information on how to access your voicemail.


### **Turn off the flashing light**

1. Wait for BASE to synchronize with the network operator again, due to the base cannot receive the Voice Message Waiting Indication (VMWI) OFF correctly, the LED will not turn OFF. If you listen the voice message, the operator will turn the VMWI OFF. The handset registered will turn OFF the LED once the base receiving the VMWI is OFF.

**-OR-**

2. Press OK key, select to Advanced Set, then **navigation key** to Reset and press **OK key** to Confirm, and press **OK**, after this simple method is done, you can see the flashing light will turn OFF, but there will be some settings reset as well.

### **Calling a number from the calls lists**

- Open the calls list by pressing the **navigation key +**.
- Select the desired entry using the **navigation key +/-**.
- Press the **Talk key**  to call the number.  
or
- Press **OK** and select a function from the list.

**If the caller's number is suppressed, only Withheld is displayed. The call is not entered in the call list.**

### **Edit calls list**

- Open the calls list.  
You have the following options:
  - Save Number – Store number in the phonebook.
  - Delete – Delete single entries.
  - Delete All – Delete all entries.

## Extending number of handsets

The delivered handset is already registered on to base station. In standby the internal number of the handset is displayed.

You can register up to 4 handsets to your base station.

If you register your ePure handset with a "third party" base station or a "third party" handset on your ePure base station (GAP), you may not be able to use some functions or only to a limited extent.

### Register new handsets

Registering an additional handset with the main base station (the base station you have connected to the telephone network):

- Press and hold down the **Paging key** on top of the base station for at least 10 seconds.
- Press the **menu key**.
- Using the navigation key find **Advanced Set** and press **OK**.
- Scroll down until you find **Register** and press **OK**.
- After a few seconds you will be asked to enter your **PIN**.
- Enter the **PIN (default 0000)** and press **OK**.
- If the registration is successful you will see the handset number on the screen.

Press the **talk key** (as if you wanted to make a call) to make sure a dial tone is available.

Repeat this procedure for every additional handset you wish to add to your ePure TAM phone.

If the registration is not successful:



- Move closer to the base station. During registration the distance between handset and base must be less than 1 m.
- Interrupt power supply of base and handset (disconnect power adapter/remove battery).
- Repeat the registration procedure.

## Conference Call creation

During a call you can make a second internal call (enquiry call), switch between call partners (brokering) or simultaneously converse (3-way conference call) without the need for two telephone lines.


### Internal conversation/Internal call

- Short press **INT** and enter the desired internal party. If only two handsets are registered, short press **INT** will automatically call the other handset.

If you receive an external call while you are on the phone to an internal call partner, you will hear an incoming call alert. End the internal call by pressing the  **End call key**. Press the  **Talk key**. You are connected to the external party.


### Call transfer to another handset

You are conducting an external call and you want to transfer it to another handset in your home or office.


- Press **INT**.
- Enter the desired number, if there is more than 2 handsets.
- When the internal party responds press the  **End call key** to transfer the call to the other party.

### Brokering/Conference


You are conducting an external call.

- Call another internal party (see above).
- The internal party answers.
- Press and hold intercom key **INT** to start a conference call. If one of the handsets presses the  **End call key**, the other handset will be connected to the external call.

## Personal settings

- Press , select **Personal Set** and press **OK**.
- Select a function from the list using the **navigation key +/-** and press **OK**.
  - **Handset Tone**
    - **Ring Volume**
    - **Ring Melody**
    - **Key Tone** – Every time a key is pressed, a brief beep is heard.
    - **Docking Tone** – When the base charging contacts beep function is turned to on, you hear a beep with put handset back.
  - **Handset Name** – To better distinguish between handsets, you can give each handset a name.
  - **Auto Pick-up** – Just pick up the handset from the base to answer a call (without pressing any key).
  - **Auto Hang-up** – Just hang up the handset to end a call.
  - **Language**
  - **Backlight** – To set handset LCD to ON/OFF.

## Advanced settings

- Press , select **Advanced Set** and press **OK**.
- Select a function from the list using the **navigation key +/-** and press **OK**.
  - **Call List** - can set Call list type to All calls or Missed calls only. If All calls is selected, press Up key in idle will view all calls lists. If Missed calls is selected, press Up key in idle will view missed call only.
  - **Conference** - When the feature is set to Auto, if handset 1 is on line with an external caller, handset 2 can seize the line and immediately join the call with handset 1 and the external caller.
  - **Auto Prefix**
    - **Digit Detect** - If the first digits of a number you are calling are identical to the digits stored, they will be suppressed.
    - **Prefix Num.** - The prefix number can be 5 digits long. The stored digits are added in front of the phone number when dialling (with a dialling pause).




- **Recall Time** - Select the recall time (flash time) for the analogue network functionalities in your country.
- **Dial Mode** - Tone: Normal dialling procedure on analog lines. Pulse: May be required for connecting older telephone systems. Please refer to the relevant documentation.
- **Register** - Additional handsets must be registered to the base station.
- **Unregister** - Select the handset you want to deregister.
- **PIN** - You can modify the PIN code (0000 on delivery).
- **Reset** - This feature allows you to reset your handset back to its default settings.
- **Call Barring** - Use this function to ban certain phone numbers from being dialled. The call barring numbers must be entered separately for each handset. You can specify bar calls to up to 4 numbers each comprising up to 4 digits. All phone numbers whose first digits match the specified numbers will be barred.
- **ECO Mode** - When ECO Mode is set to ON (range selected to House, Apartment or Room), the base and handset power transmission is regulated and a radiation reduction is achieved when handset is near the base station. When it is set to OFF the base transmission power is maximum and not regulated, When it is set to Room the base transmission power is minimum and regulated.
  - **Range Sel (Range Selection)**
    - House
    - Apartment
    - Room
    - Off

Note: with multi-handset, ECO mode will be default to Off.
- **Zero Emit**, when set to On, both base and handset power transmission is set to minimum in standby mode.

## Answer machine

Your ePure TAM features an integrated digital answer machine with a max. recording capacity of 30 minutes. You can operate your answer machine from the base and from any handset registered to the base. On delivery an outgoing message for each mode (Answer & Rec and Answer only) is pre-recorded. The answer machine is ready to use.

### Activate/deactivate the answer machine (from the base)

Press  key on the base station to switch the answer machine on or off.


The LED in front of TAM base








- lights up when the answer machine is activated
- doesn't light up when the answer machine is deactivated
- flashes when you have new message(s) on the answer machine

### Operating the answer machine (from the base)



If you have new messages, the LED under key is flashing.

The messages are played back beginning with the most recent.


- Press  to start playback.
- During playback the following options are available:

| Key   | Function                                  |
|---|---|
|    | Activate/deactivate answer machine        |
|    | Repeat message/return to previous message |
|    | Skip to next message                      |
|    | Start/end playback                        |
|    | Delete message during playback            |
|  /  | Adjust volume                             |

## Activate/deactivate the answer machine (from the handset)


- Press , select **Answ Machine** and press **OK**.
- Select **Answ On/Off** and press **OK**.
- Select **On** or **Off** using the **navigation keys +/-** and press **OK**.  is displayed when the answer machine is switched on.
- You must now select the desired operating mode and record a personal outgoing message:



## Record a personal outgoing message

- Press , select **Answ Machine** and press **OK**.
- Select **Answer Mode** and press **OK**.
- Select **Record also** (the caller can leave a message) or **Answer only** (the caller cannot leave a message) and press **OK**.
- Select **Personalized** and press **OK**.
- Select **Record** and press **OK**.
- Speak your outgoing message into the handset microphone. Your personal outgoing messages can be up to 1 minute long (max.).
- Press **OK** to end recording. The recorded personal outgoing message is played back.

- **To restore the standard outgoing message, select **Record also** or **Answer only** followed by **Predefined** and press **OK**.**
- **To listen to an outgoing message, select **Answer & Rec** or **Answer only** followed by **Play** and press **OK**. The outgoing message is played back.**
- **To delete a personal outgoing message, select **Record also** or **Answer only** followed by **Delete** and press **OK**.**

## Operating the answer machine (from the handset)

If you have new messages on your answer machine the symbol  flashes on the display of the handset. The messages are played back beginning with the most recent and over the handset loudspeaker (the handset loudspeaker activates automatically).

- Press , select **Answer Machine** and press **OK**.
- Select **Play** and press **OK**.
- Press the End call key  to end playback.

During playback:


- Press **OK** to open the Options menu.

The following options are available:

- **Repeat** – repeat the message
- **Next** – skip to next message
- **Previous** – return to previous message
- **Delete** – delete a message during playback



Press the **navigation key** +/-, to adjust the playback volume.

### Delete all old messages (from the handset)


- Press , select **Answer Machine** and press **OK**.
- Select **Delete all** and press **OK**.
- To delete all messages confirm with **OK**.

### Record memo

You can leave a message behind for other internal users by recording a memo.

- Press , select **Answer Machine** and press **OK**.
- Select **Record Memo** and press **OK**.
- Recording is displayed.
- Speak your memo into the handset microphone.
- Press the End call key  to end recording. The memo is stored the same way as an incoming message.

## Answer machine settings

- Press , select **Answ Machine** and press **OK**.
- Select **Answ Setting** and press **OK**.
- Select the desired function by pressing the **navigation key +/-** and press **OK**.
  - **Ring Delay** – Select the desired delay or **Toll Saver**. If you set the delay to **Toll Saver**, your answer machine will answer after 2 rings if you have new messages. If you do not have new messages it will not answer until 6 rings. This enables you to save costs by hanging up before you are connected.
  - **Remote Acc.** – Switch remote access on or off
  - **HS Screening** – When the answer machine is on and the function activated, you can listen to the messages being recorded over the handset loudspeaker
  - **TAM Language** – Select the default outgoing message language.

## Memory full

The recording capacity of your answer machine is 30 minutes (including outgoing messages).

If the memory is full, **Memory full** appears on the handset display.

No more messages can be recorded. The answer machine switches to **Answer only** mode automatically.


You must delete old messages.

## Remote access

You can remote access your answer machine from any external telephone with DTMF or multifrequency dialling function. Dial your number press **#** and enter your PIN code (0000 on delivery). The remote access PIN code is identical with the PIN code of your telephone.

## Activating/deactivating remote access

To be able to remote access your answer machine you must first activate the function.

- Press , select **Answ Machine/Answ Setting/Remote Acc.** and press **OK**.
- Select **Activate** or **Deactivate** and press **OK**.

### Remote operation from an external telephone

You can remote access your answer machine from any telephone with DTMF or multifrequency dialling function.

- Dial your number.
- Press # when you hear your outgoing message. The outgoing message is interrupted.
- Enter your PIN code (0000 on delivery). If the PIN is correct you will hear a confirmation tone.
- You can now perform a number of functions by entering the relevant digits (see the following table):


| Key | Function                       |
|-----|--------------------------------|
| 1   | Return to previous message     |
| 2   | Play all messages              |
| 3   | Skip to next message           |
| 6   | Delete message during playback |
| 7   | Switch answer machine on       |
| 8   | Stop playback                  |
| 9   | Switch answer machine off      |

## Help

### No dial tone

- Use only the telephone line cord supplied.
- Check that the telephone line cord is connected properly.
- Check that the mains power is connected properly and switched on.

### No display

- Check that the batteries are inserted correctly and fully charged. Use only approved rechargeable batteries supplied.
- Check that the handset is switched on. Press and hold the End Call key .
- Reset the base by removing the batteries and disconnecting the mains power. Wait for around 15 seconds before connecting it again. Allow up to one minute for the handset and base to synchronize.

### icon flashes


- Handset is out of range. Move closer to the base.

- Make sure that the handset is registered to the base, see chapter "Registering an additional handset".
- Check that the mains power is connected properly and switched on.

### **Keypad does not seem to work**

- Check that the keypad lock is not on.

### **icon is not fully charging the battery in operation**

- Adjust the handset slightly on the base.
- Clean the charging contacts with a cloth moistened with alcohol.
- Check that the mains power is connected properly and switched on.
- The battery is full. When the handset is fully charged,  icon is steady on.

### **No Caller ID**

- Check your subscription with your network operator.
- The caller may have withheld their number.
- The record cannot be found in your phonebook. Check that you have the correct name / number stored in your phonebook, with the full area code.

### **I have forgotten my PIN!**

You can reset your handset back to default setting from Advanced settings, then the handset will automatically reset and the PIN will default back to 0000.

### **Cannot register a handset to the base**

- You can register up to a maximum of 4 handsets to a ePure base. You must de-register a handset in order to register a new one.
- Check that you have entered the correct PIN code (default = 0000).
- Check that you are at least one meter away from other electrical equipment to avoid interference when registering.

### **Handset does not ring**

- The handset ringer volume may be set to Off.

### **Base unit does not ring**

- The base ringer volume may be set to Off.

### **Noise interference on my phone or on other electrical equipment nearby**

- Place your ePure at least one meter away from electrical appliances or any metal obstructions to avoid any risk of interference.

## **Appendix**

### **Using Internet/cable telephone adapters on an analog port**

When using an analog telephone on the analog connection of an Internet or cable telephone adapter, not all the described features (in particular calling line display) may function in the same way as with a standard analog telephone line. This does not cause the ePure TAM to malfunction.

Several factors can cause a failure of specific features to function:

- The Internet/cable telephony provider may not provide the function on its Internet/cable telephony connection.
- The adapter used to convert Internet/cable telephony to analog telephony (usually supplied by the provider) may not forward the functions to connected telephones or may forward them in a non-analog format.

If this happens, please check the ePure on an analog fixed line and/or contact your Internet/cable telephony provider.

### **Care**

Your telephone is a sophisticated product in terms of design and construction, and should therefore be handled with care.

To clean the telephone, wipe first with an antistatic cloth or a damp, soft leather cloth and then dry using a dry cloth.



## Recycling (environmental protection)



At the end of the product's life cycle, the telephone must not be disposed of in normal domestic waste. Please take it to a collection point for processing electrical and electronic equipment: see symbol on the product, in the user manual and/or packaging.

Some materials used in this product can be recycled if you take it to a recycling depot. By recycling parts or raw materials from used products you will be making an important contribution to environmental protection. Please contact your local authority if you require information about collection points in your neighbourhood.

## Disposing of the rechargeable battery

By law, all used batteries and accumulators must be recycled and not disposed of in domestic waste. Please dispose of them according to the official regulations. Take them to a recycling depot. The batteries/accumulators will be recycled since they may, for example, contain lithium (Li), nickel cadmium (Ni - Cd), lead (Pb), cadmium (Cd) or mercury (Hg). The batteries and accumulators are labelled with symbols and information on their contents.

e.g.:



**NI-CD**  
**NI-MH**

## Warranty conditions

Your telephone is subject to a guarantee from the date of purchase in accordance with the legal provisions of the country in which the telephone was purchased. As evidence of the date of purchase, please keep the receipt or the warranty card completed by the retailer. All defects attributable to material and manufacturing faults will be corrected free of charge within the warranty period, either by repairing or replacing the defective equipment.

The warranty does not cover expendable materials (battery cells), defects which affect the value or use of the equipment only insignificantly, and damage caused by incorrect use, ordinary wear and tear, or manipulation by third parties.

This warranty does not cover consequential damage caused by the use, failure or defectiveness of the product. In particular, no liability whatsoever is accepted for damage to property and pecuniary loss.

To claim under this warranty, please contact the retailer where you purchased your telephone.

The Swissvoice Service Center will replace it with an equivalent good or perform a repair. In the case of components subject to wear (e. g. batteries) this period lasts for 6 months from the date of purchase.

### **Approval and conformity**

This analog telephone DECT complies with the basic requirements contained in the R&TTE Directive 1999/5/EC on radio equipment and telecommunications terminal equipment and is suitable for connection and operation in the member state indicated on the base station and/or packaging.



The declaration of conformity may be viewed at:  
**[www.swissvoice.net](http://www.swissvoice.net)**.

The CE symbol confirms the conformity of the telephone with the above directive.

# Warranty Certificate

## swissvoice Warranty Certificate

*Garantieschein, Bon de garantie, Certificato di garanzia,  
Garantiebewijs, Takuutodistus, Garantibevis, Garantisedel,  
Garantibevis, Certificado de Garantía, Talão de garantia*

**device type:** (Gerätetyp, type d'appareil, tipo di apparecchio, toesteltype, laitetyyppi, maskintype, apparatyp, apparattype, modelo del aparato, modelo do aparelho):

**serial number:** (Seriennummer, numéro de série, numero di serie, serienummer, sarjanumero, serienummer, serienummer, serienummer, número de serie, número de série):

**dealer's stamp:** (Händlerstempel, sceau du vendeur, timbro del rivenditore, stempel van de dealer, kauppiaan leima, forhandlerens stempel, försäljarens stämpel, forhandlerstempel, sello del comerciante, carimbo do vendedor):

**dealer's signature:** (Unterschrift des Händlers, signature du vendeur, firma del rivenditore, handtekening van de dealer, kauppiaan allekirjoitus, forhandlerens underskrift, försäljarens underskrift, forhandlers underskrift, firma del comerciante, assinatura do vendedor):

**date of purchase:** (Kaufdatum, date d'achat, data d'acquisto, datum van aankoop, ostopäiväys, kjøpsdato, datum för köpet, salgsdato, fecha de adquisición, data de compra):



Internet:  
[www.swissvoice.net](http://www.swissvoice.net)

© Swissvoice SA 2013  
20407429en\_ba\_b0  
SV TAM 20407429

Photo may differ from the actual product.